



LOCK BOX INSTALL INSTRUCTIONS

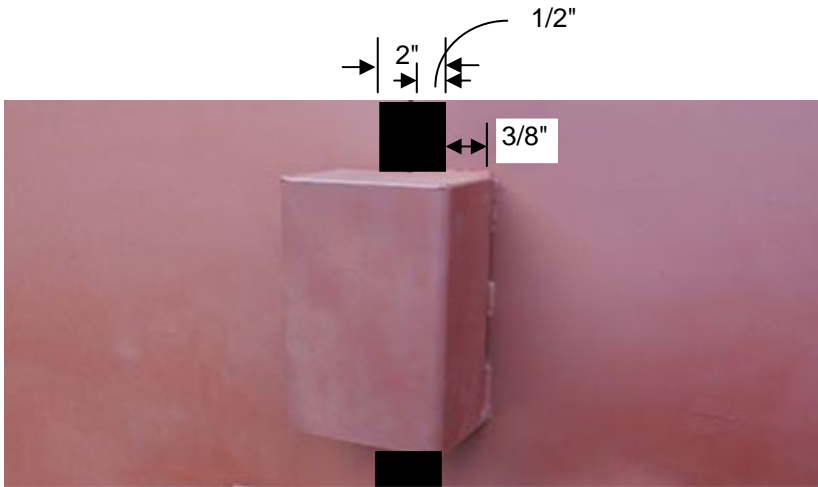

Tab is welded to the inactive door.
The tab is 2" wide. You will have
3/8" space on either side of the
window for extra play and welding
space away from door gasket.

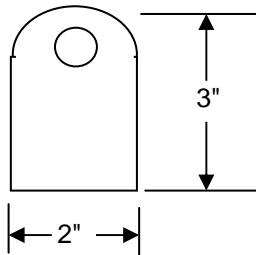

BUILT RITE INDUSTRIES
17232 S. Figueroa St.
Gardena, CA 90248
562-366-0784 (p)
562-366-0805 (f)